

EAGLE MANUFACTURING


Missing any parts or pieces?
Contact us and we will ship them to you directly.

info@eagletruckaccessories.com
eagletruckaccessories.com



EAGLE MANUFACTURING
EAGLETRUCKACCESSORIES.COM

EAGLE HF COVER

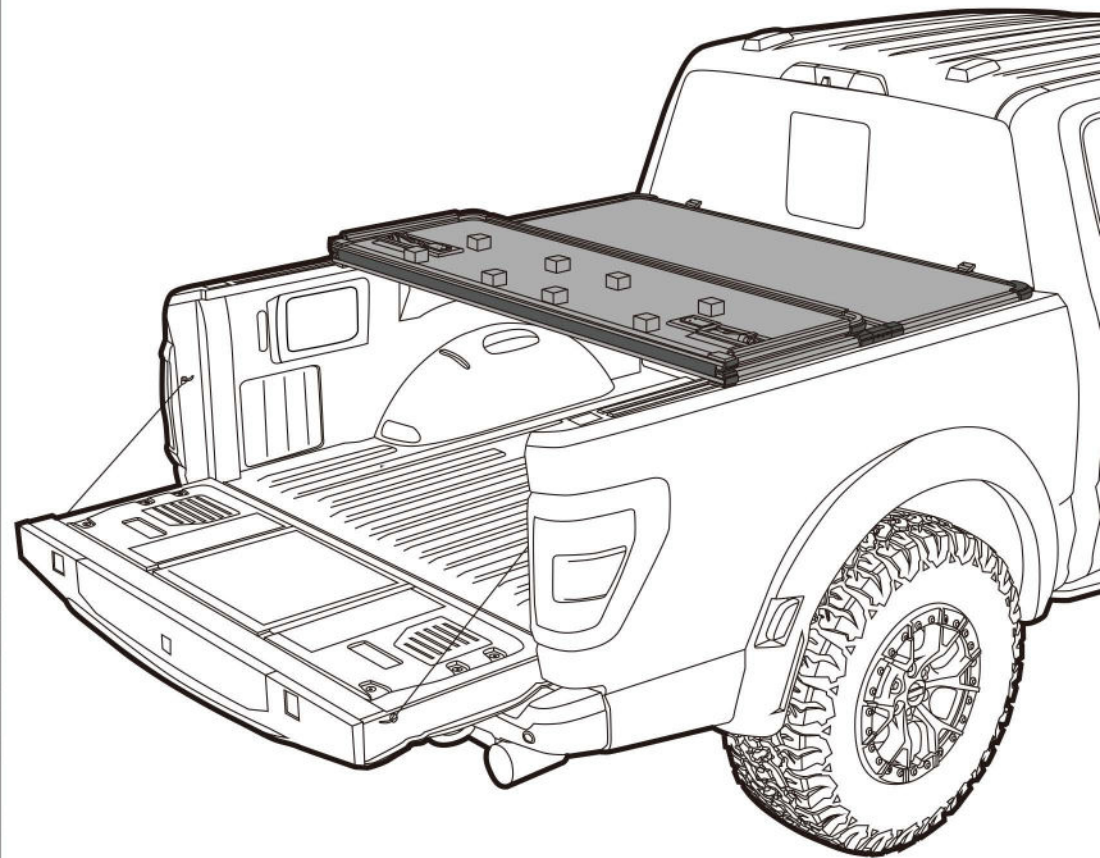

EAGLE MANUFACTURING

EAGLETRUCKACCESSORIES.COM

Part List

①	X1	Cover Assembly
②	X6	Clamp Foam Pad
③	X1	Tailgate Stick Tape
④	X2	Rear Clamp
⑤	X1	Front Hinge Plug
⑥	X1	Rear Hinge Plug
⑦	X1	Front Stick Tape(For Ford ONLY)
⑧	X4	Mounting Block (For Toyota/Nissan/Jeep ONLY)
⑨	X1	Allen Wrench (For Toyota/Nissan/Jeep ONLY)
⑩	X2	Secure Clamp with Knob



Warning

1. DO **NOT** Drive with Tonneau partially opened.
2. Check all clamps before driving, ensure they are secure.
3. Remove Tonneau cover before towing truck from rear.

STEP 1


EAGLE MANUFACTURING 1-YEAR WARRANTY

1. Please check components and clean truck before install.
FORD TRUCKS: Please use stick tapes on the front of bed

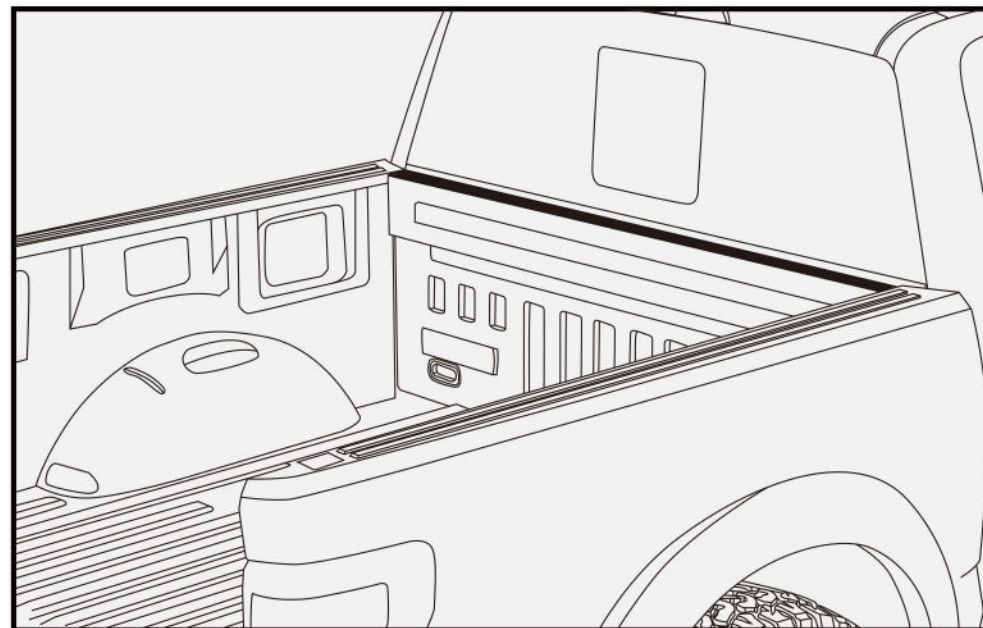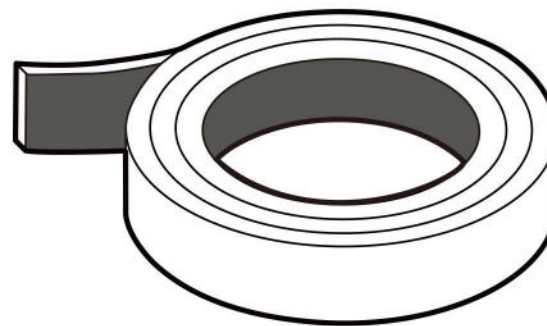


STEP 2

1. Place assembled cover behind cab.
2. Release secure strap.

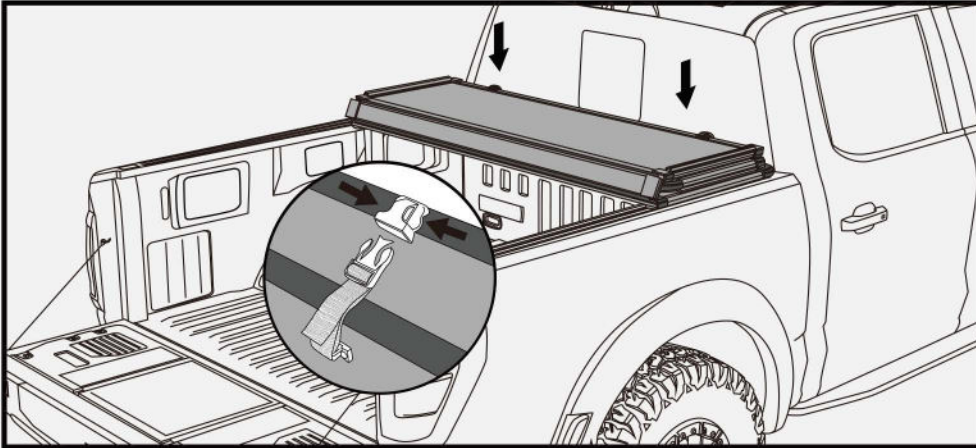


STEP 3

1. Unfold bed cover completely.
2. Adjust cover for proper cab alignment.

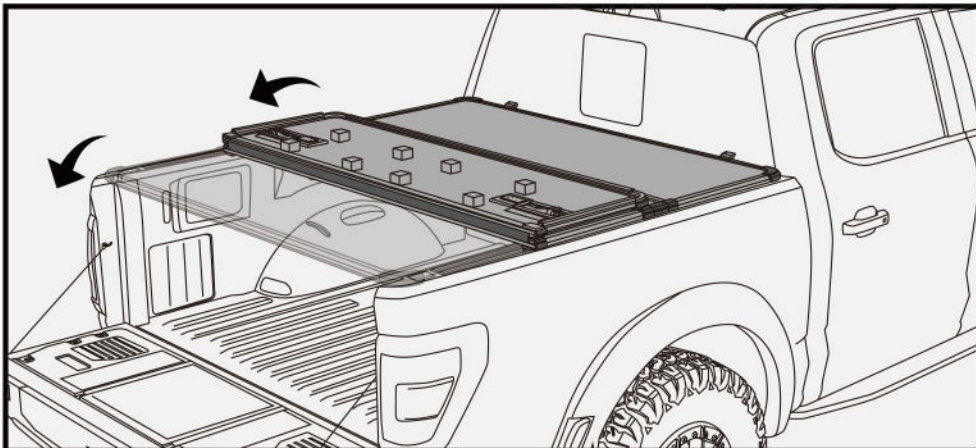


STEP 4

1. Carefully refold the cover without moving the position of the cover on the truck box.

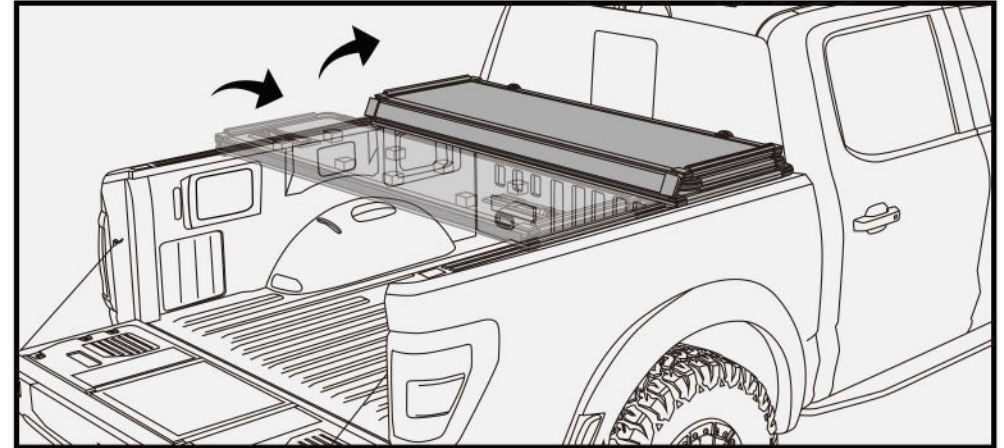

STEP 5

1. Pull down integrated clip to vertical position.
2. Loosen the knob and slide clip forward on bed rail.
3. Hook J-Shaped clip beneath bed rail lip and secure knob.

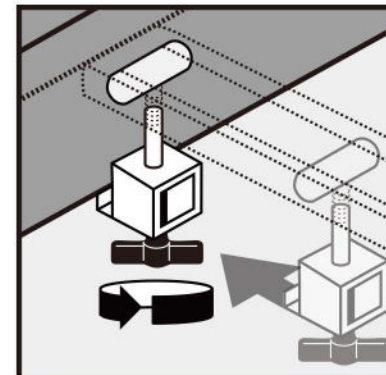








NOTE

DO NOT USE WRENCH

STEP 6

IF NEEDED: Cut bed liner. Review photos below.

NOTE: Secure Clamps may not mount precisely vertical.

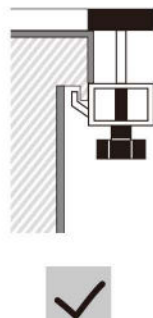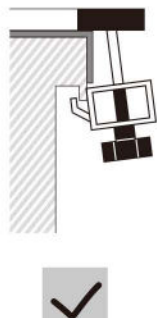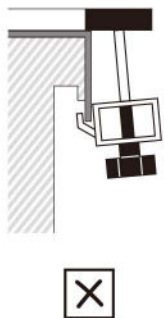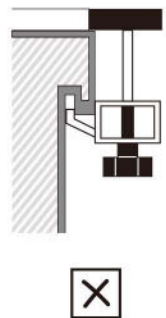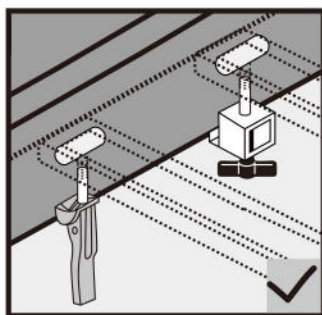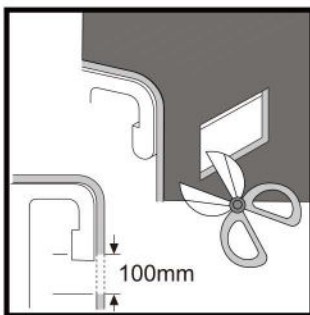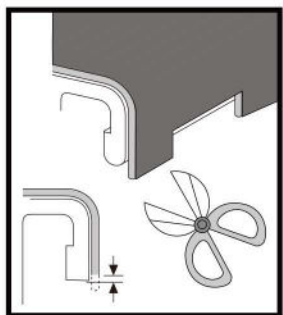

Secure Clamps may not mount precisely vertical.




1. Unfold Tonneau Cover.

2. Slide clamp forward on the box and adjust screws into place.

3. Pull clamp down and hook it into vertical position.


NOTE

CLAMPS MAY NOT MOUNT PRECISELY VERTICAL

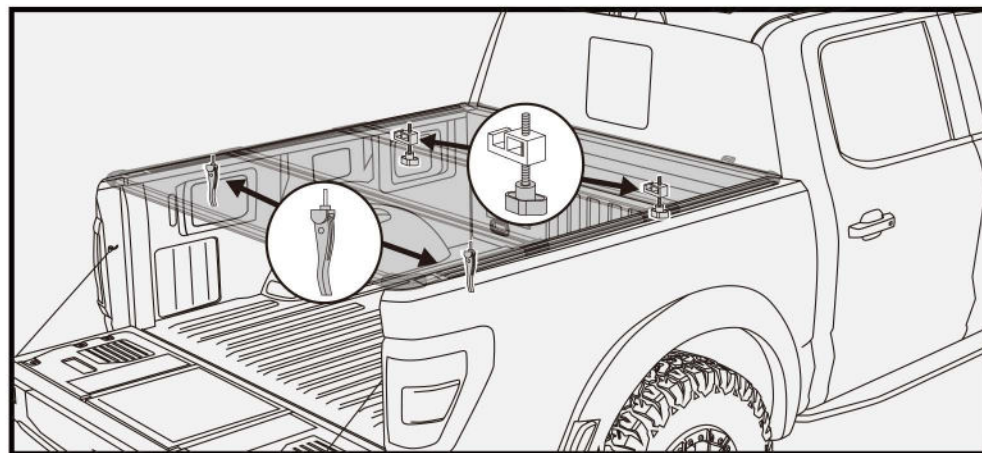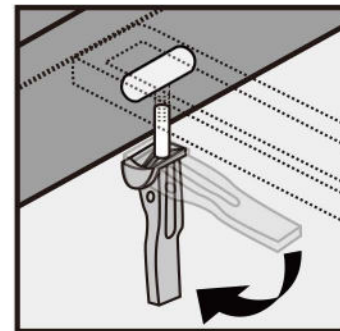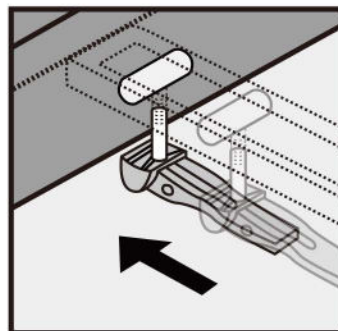

STEP 7

1. Use stick tape at the tailgate to avoid gap.
2. Close the tailgate.

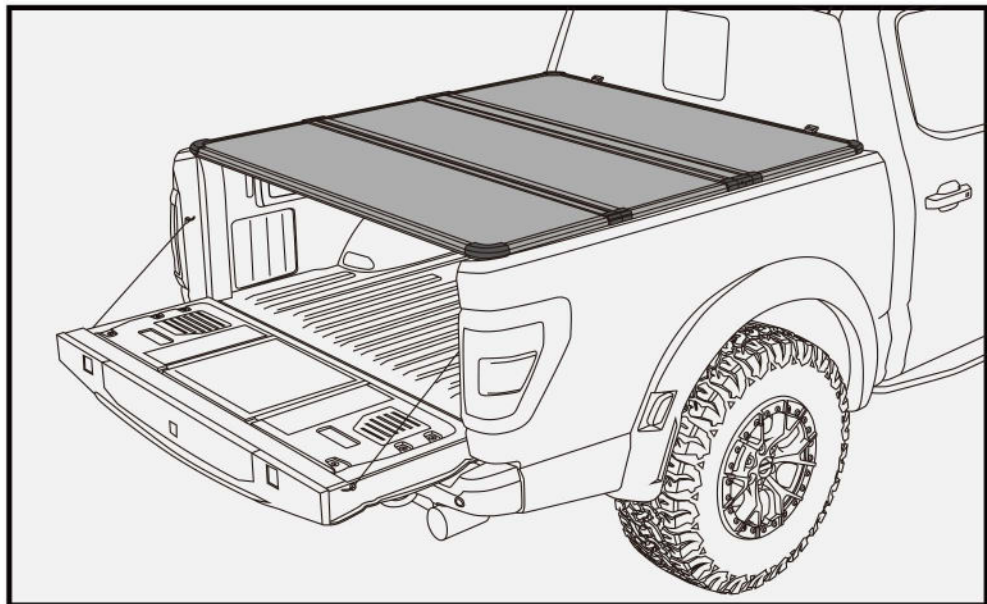

STEP 8




TRUCKS WITH UTILITY RAIL:

You will need extra accessories for installation

1. Slide mounting blocks into side rail, which can be used as lip.
2. Secure clamps as instructed.

NOTE

Mounting Blocks may vary depending on specific vehicle

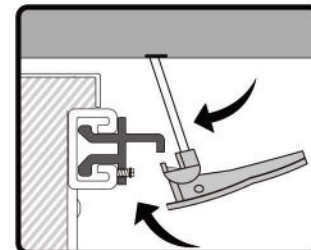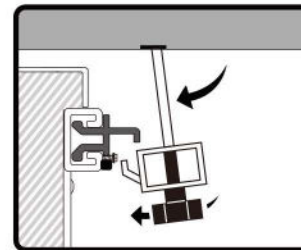
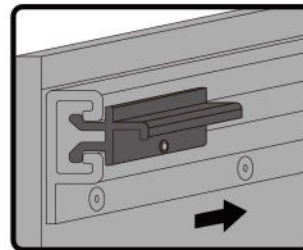


		
SP-BC1003	SP-BC1004	SP-BC1005
FIT FOR TITAN	FIT FOR FRONTIER	FIT FOR TACOMA, TUNDRA, GLADIATOR

STEP 9

SECURE KNOB FOR STRAPS



1. Adjust clamp to proper position on both sides.
2. Hand tighten it with the knob.
3. Adjust the length of secure straps.

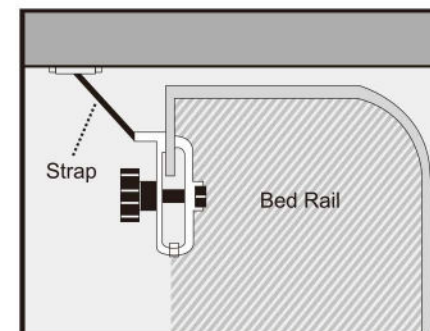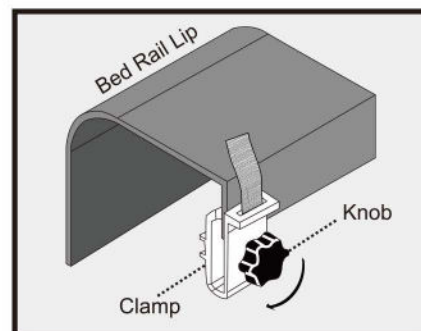

STEP 10



FOLD UP THE COVER

1. Open the tailgate and release the rear clamps.
2. Fold the first panel.
3. Fold and secure the rear clamps back to original position.

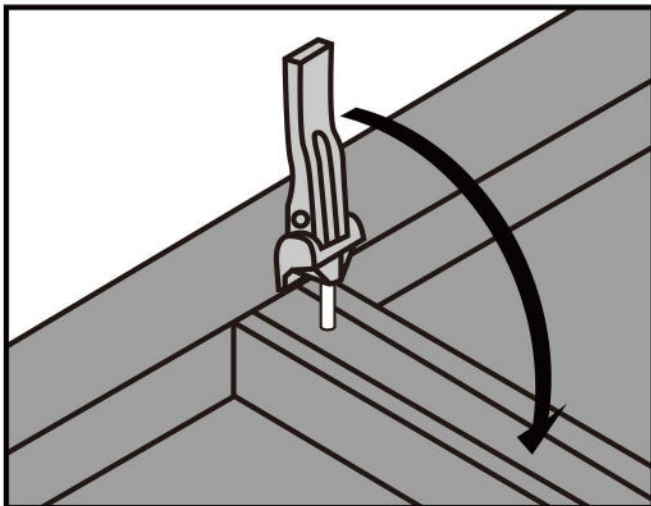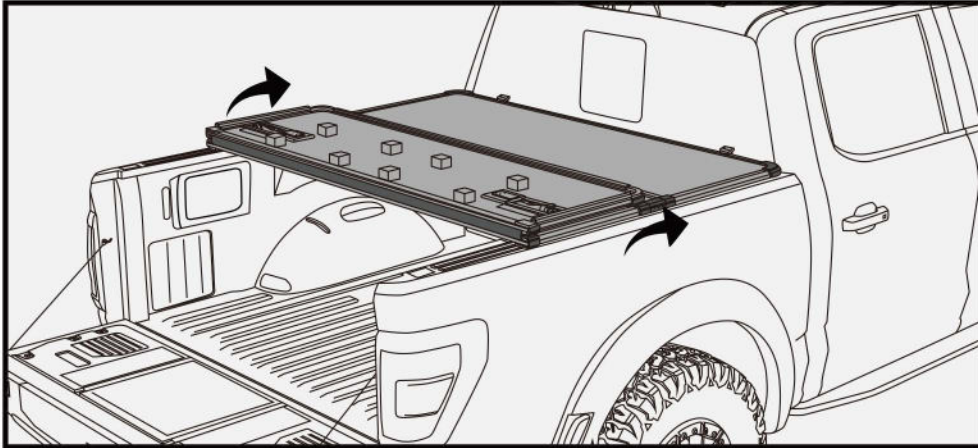

STEP 11

1. Fold the second panel.
2. Secure safety buckles.

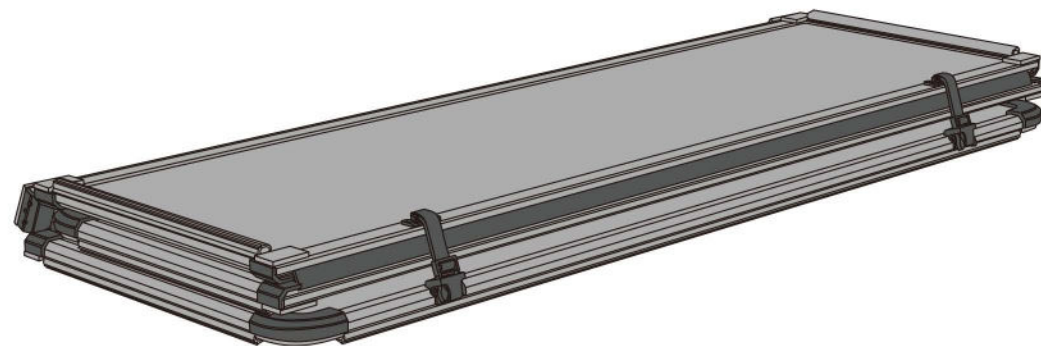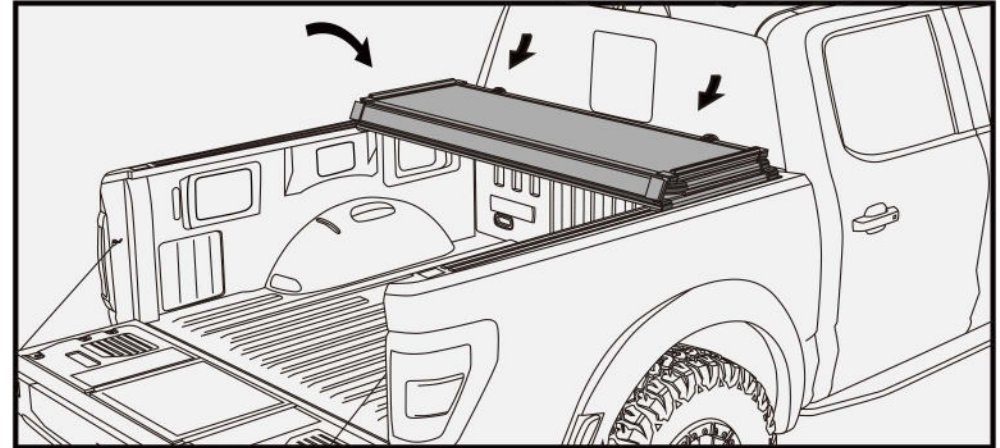

Check clamps and secure straps, ensure they are tight.