

EAGLE MANUFACTURING

Missing any parts or pieces?
Contact us and we will ship them to you directly.

info@eagletruckaccessories.com
eagletruckaccessories.com



EAGLE MANUFACTURING
EAGLETRUCKACCESSORIES.COM

EAGLE HF LP COVER

Regular Model Installation Instructions



EAGLE MANUFACTURING


EAGLETRUCKACCESSORIES.COM

Qty.	DIAGRAM	PART LIST
1		Cover
1		Left & Right Addition Bars
1		Manual
4		Black M6*16 Combination Screws
2		Support Rods
2		Support Rod Brackets
6/8		Clamp
6/8		Clamp
6/8		Four-Stand Handle
6/8		M8*40 Screws
2		Waste Pipe
1		5.0 Allen Key
1		4.0 Allen Key
1		2.5 Allen Key


NOTE:

EAGLE MANUFACTURING 3-YEAR WARRANTY


1. Before installation, verify the year, make and model on the cover to match your truck.
2. We recommend having two people install tonneau cover.
3. Clean both sides of the tailgate thoroughly to ensure proper fitment.
4. Inspect the package for any damage. If outer packaging is damaged, check the tonneau cover for any issues before proceeding.
5. Do not place heavy objects on the tonneau cover.
6. Never stand or jump on the tonneau cover.
7. Use only soft materials when cleaning the tonneau cover to prevent scratches or damage to its appearance.
8. Carefully read all instructions, Eagle Manufacturing is not responsible for any damage resulting from improper installation or misuse.

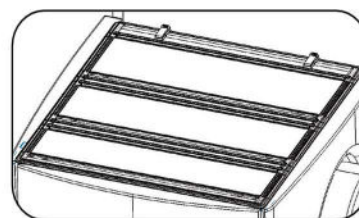

1. Flat state of the cover

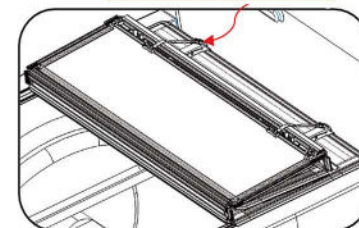

2. Folding state of cover

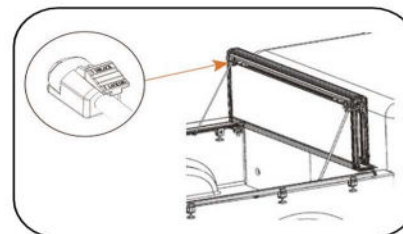


3. Cover plate vertical state



STEP 1

Connect section A & B of the left and right side rails separately. (If the side rails are integral, skip this step)


Splicing & assembling the two ends of the retrofit bar

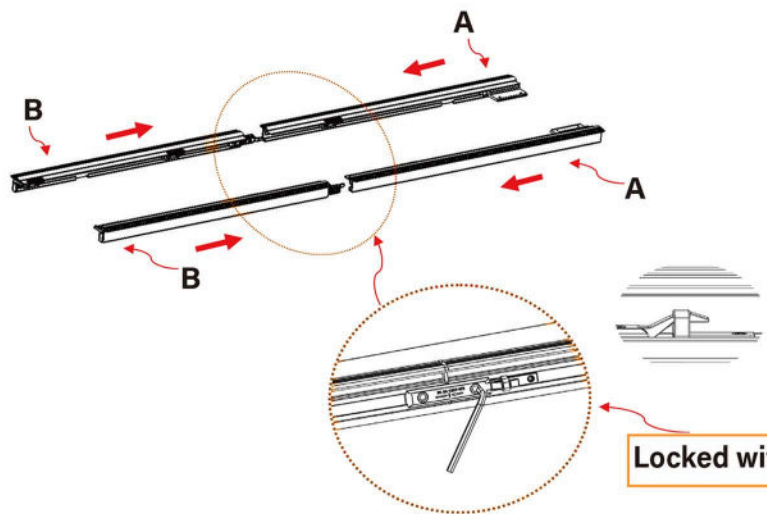


Locked with a 4.0 Allen key

STEP 2


Place the left and right side rails against the upper and inner sides of the wagon, respectively, with the front part flush with the front side of the wagon.

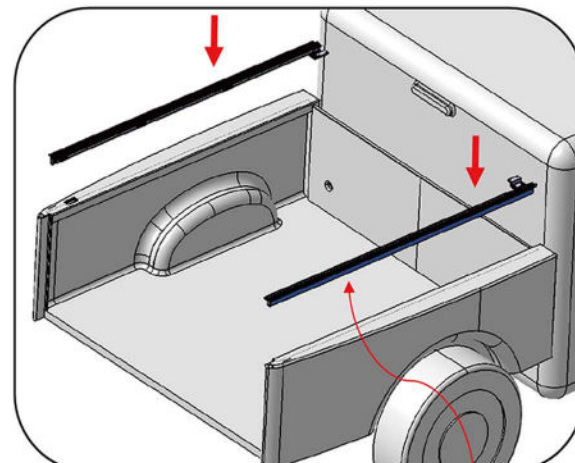

Flush with the interior to ensure that the retrofit bar is vertical

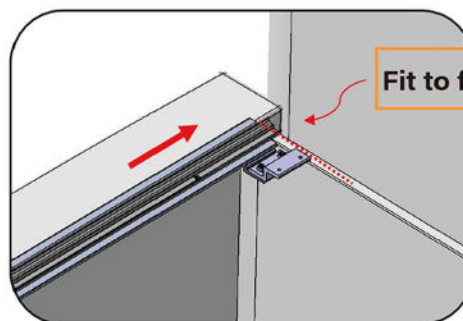


Fit to front end

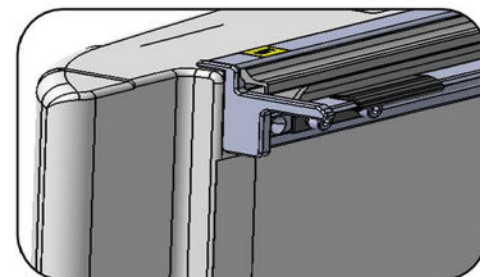




STEP 3

Take out the clips, screws, wrenches, and handles from the accessory box to install them.


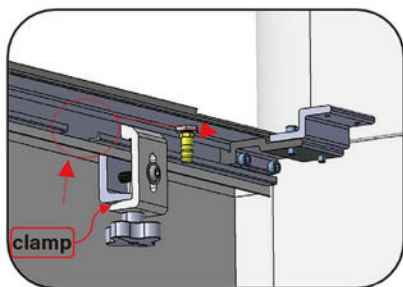


Slide the clips over the slots and into the guides.

Integral retrofit rod assembly schematic

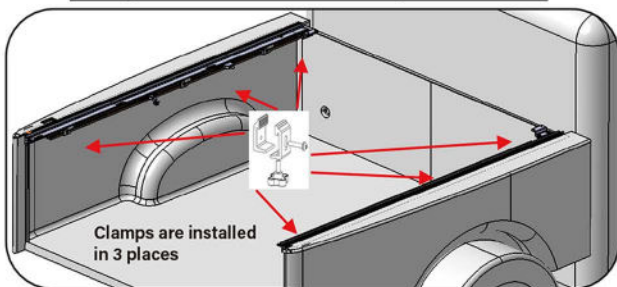




Schematic assembly of truncated retrofit rods

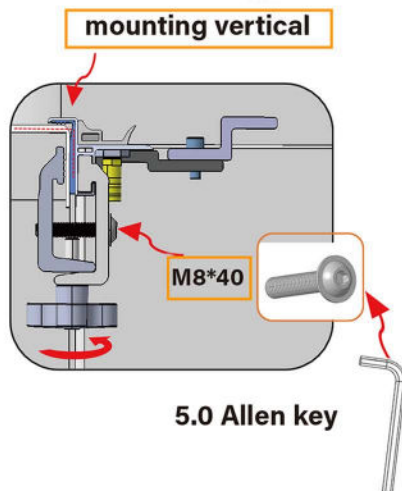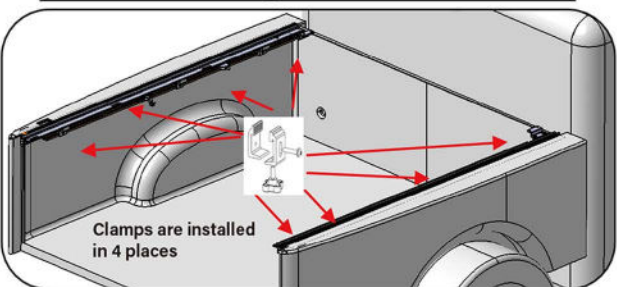

Pre-tighten the screws first so that the side rails fit snugly against the wagon, and then tighten them after all the clips have been installed.

STEP 4

Take out the support bar and support bar bracket from the accessory box and install them.

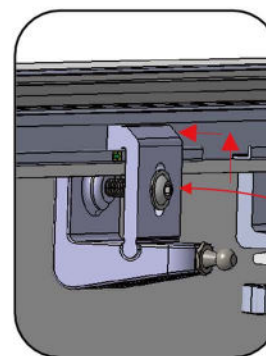
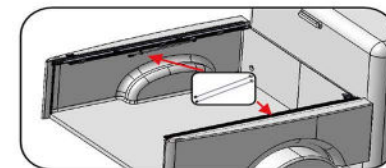
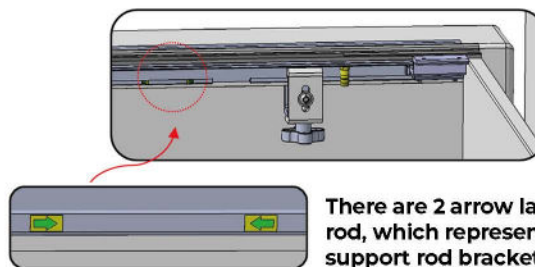


As shown in the picture: slide the bracket into the guide rail from the slot and fix it

M8*40



5.0 Allen key

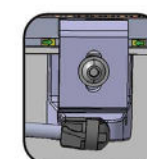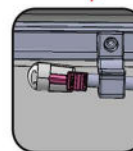

Attach the ends of the support rods to the bracket




STEP 5


Position the cover plate onto the truck bed, aligning its front edge with the rail cross plate while ensuring both sides are evenly flush with the truck bed. Secure the front rail by fastening the combination screws tightly.

NOTE: To prevent damage caused by handling the hood, this installation procedure can be done with the assistance of two people.


1. Align the cover plate horizontally in the center, and snap the front rail into the slot on the cross plate.

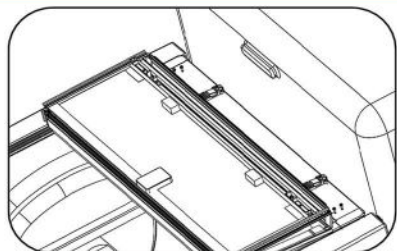


3. Adjust the cover plate left and right to see if the holes are aligned

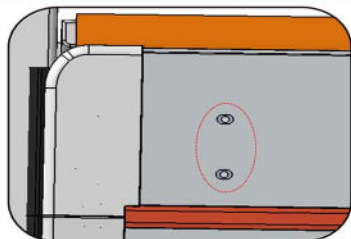


2. Turn out the rubber strip under the front rail and wrap it around the truck bed.

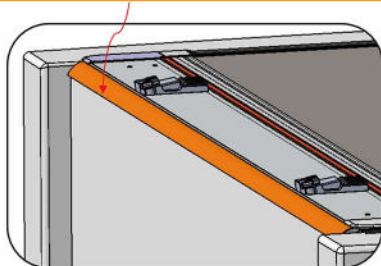


4. Pre-tighten the bolts

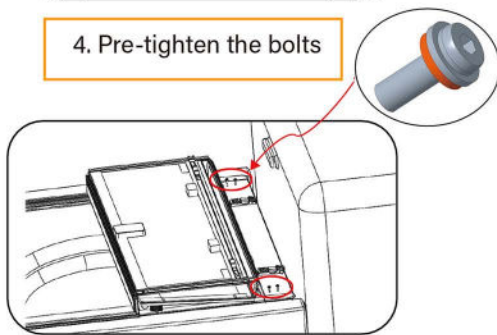


5. Spread the cover horizontally and centered to ensure that each lock is working properly.

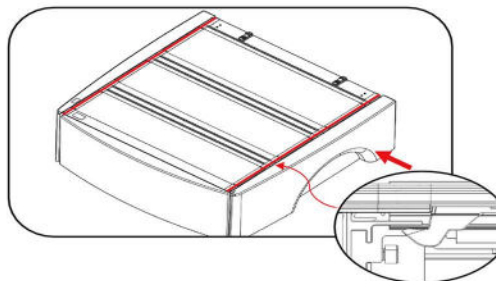


6. Tighten the bolts

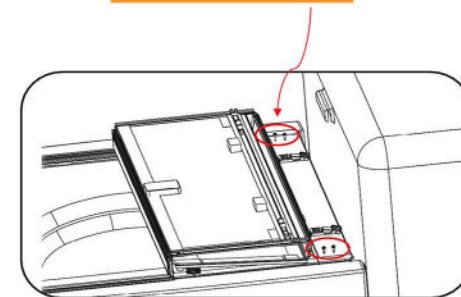

7. Install the included drain hose to the front of the side beam and push the drain hose to the outside of the bottom.

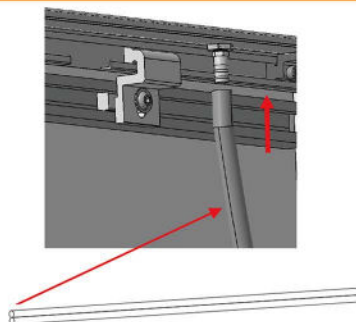

8. Close the cover, then close the tailgate

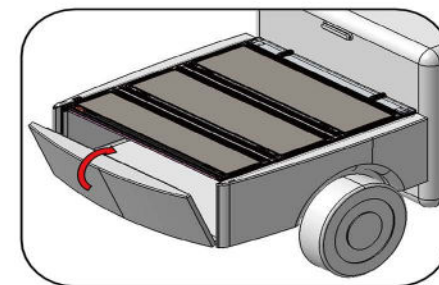

NOTE: Different brands use different shaped clamps.

1. Install pad "a" into the stake holes in the side using an allen key while placing the pad through the holes to hold place.

2. Insert the hexagonal screw "c" into the screw hole and tighten with a 5mm wrench.

3. Repeat Steps 1 & 2 on both sides.

