

EAGLE MANUFACTURING

Missing any parts or pieces?
Contact us and we will ship them to you directly.

info@eagletruckaccessories.com
eagletruckaccessories.com



EAGLE MANUFACTURING
EAGLETRUCKACCESSORIES.COM


EAGLE HF LP COVER

Utility Track Model Installation Instructions



EAGLE MANUFACTURING


EAGLETRUCKACCESSORIES.COM

Qty.	DIAGRAM	PART LIST
1		Cover
1		Left & Right Addition Bars
1		Manual
4		Black M6*16 Combination Screws
2		Support Rods
2		Support Rod Brackets
2		Support Rod Recovery Assembly
6/8		Clamp
6/8		Slider
6/8		M8*25 Screws
2		Waste Pipe
1		5.0 Allen Key
1		4.0 Allen Key
1		2.5 Allen Key


NOTE:

EAGLE MANUFACTURING 3-YEAR WARRANTY


1. Before installation, verify the year, make and model on the cover to match your truck.
2. We recommend having two people install tonneau cover.
3. Clean both sides of the tailgate thoroughly to ensure proper fitment.
4. Inspect the package for any damage. If outer packaging is damaged, check the tonneau cover for any issues before proceeding.
5. Do not place heavy objects on the tonneau cover.
6. Never stand or jump on the tonneau cover.
7. Use only soft materials when cleaning the tonneau cover to prevent scratches or damage to its appearance.
8. Carefully read all instructions, Eagle Manufacturing is not responsible for any damage resulting from improper installation or misuse.

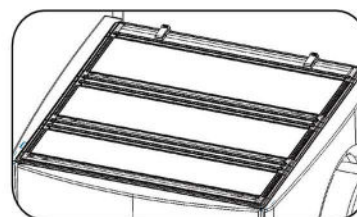

1. Flat state of the cover

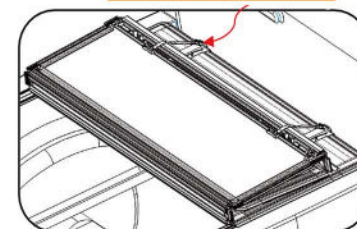

2. Folding state of cover

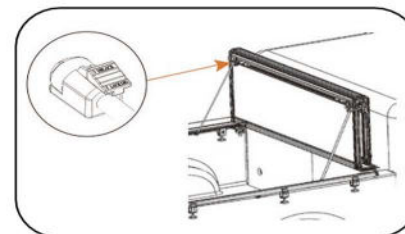


3. Cover plate vertical state




STEP 1

Connect section A & B of the left and right side rails separately. (If the side rails are integral, skip this step)

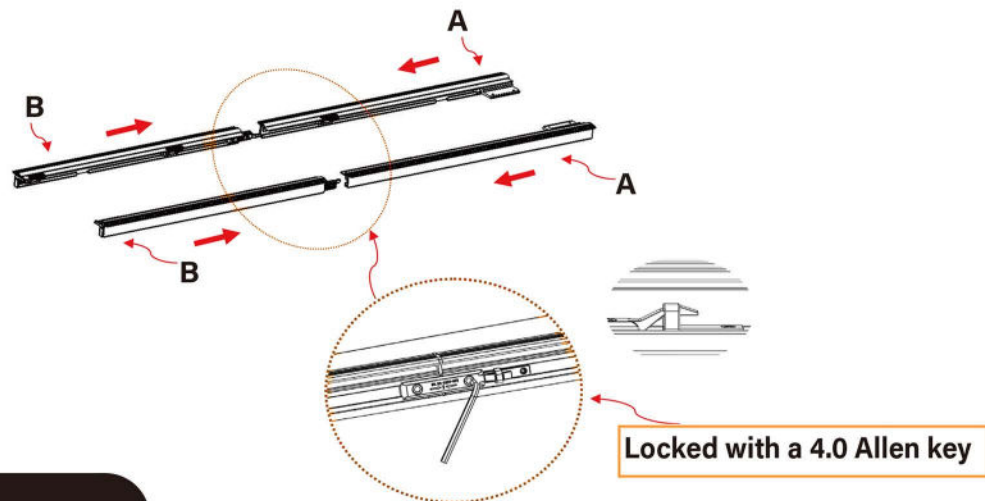


STEP 2

Place the slider and support bar recovery assembly into the side rails on both sides of the carriage in sequence.

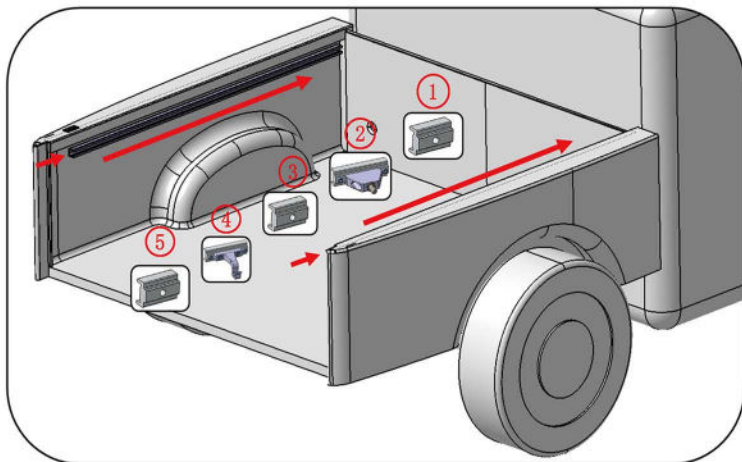


STEP 3


Place the left and right side rails against the upper and inner sides of the wagon, respectively, with the front part flush with the front side of the wagon.

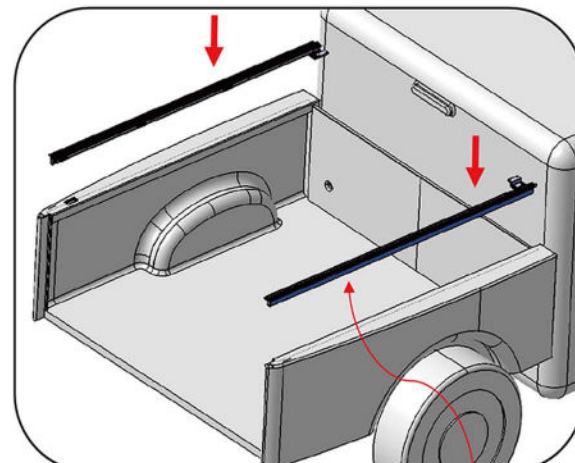

Flush with the interior to ensure that the retrofit bar is vertical

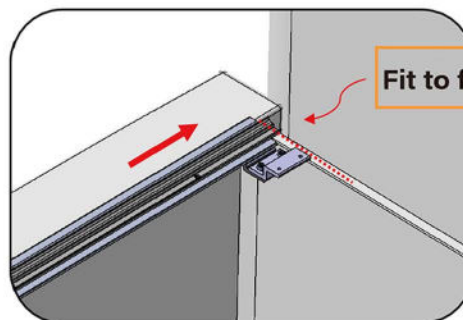


Fit to front end

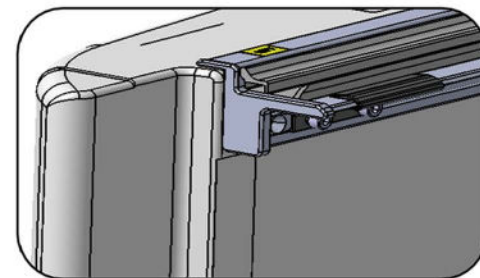




STEP 4


Take out the clips, screws, wrenches, and handles from the accessory box to install them.

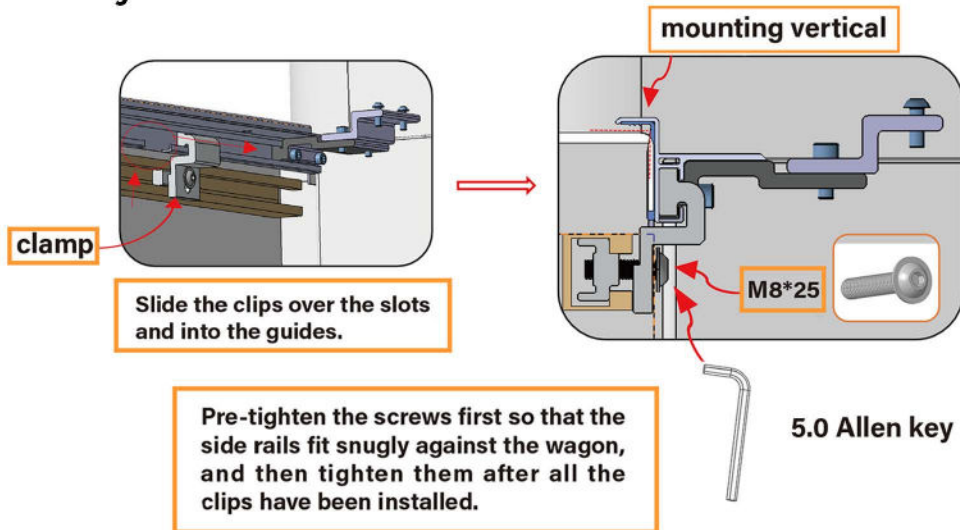

Integral retrofit rod assembly schematic


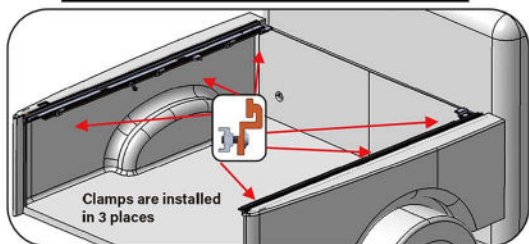


Schematic assembly of truncated retrofit rods

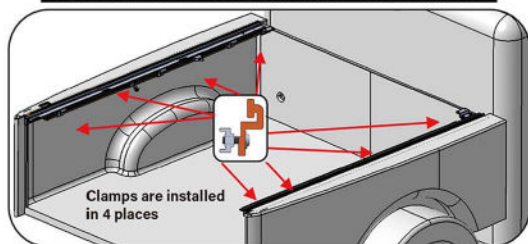

STEP 5

Take out the support bar and support bar bracket from the accessory box and install them.

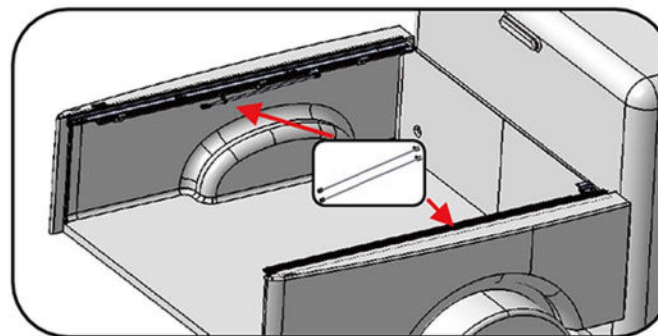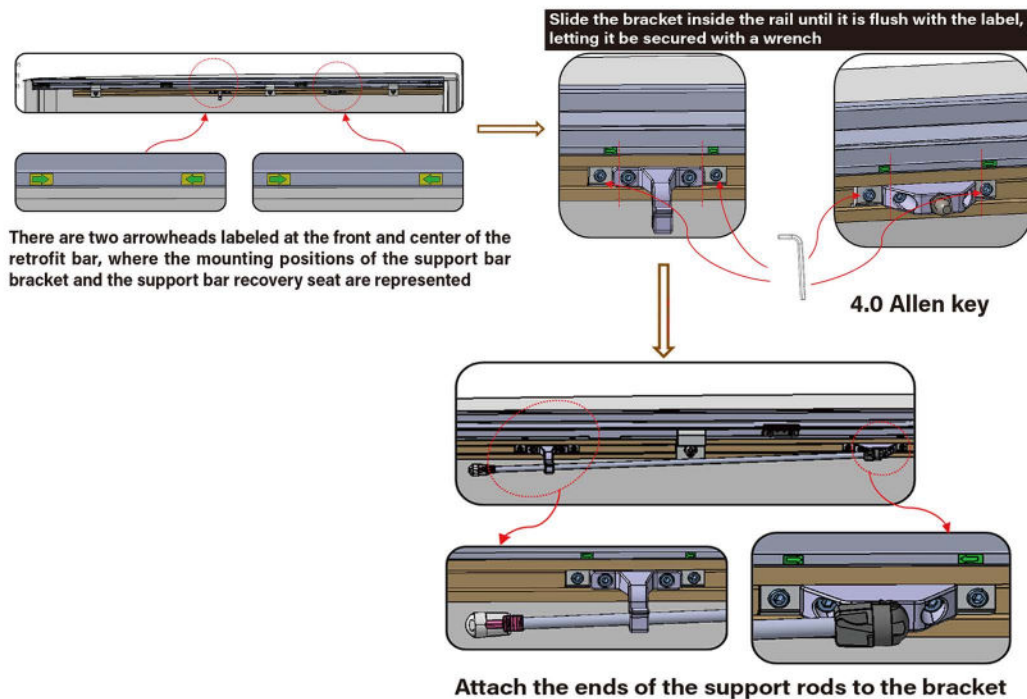


STEP 6


Position the cover plate onto the truck bed, aligning its front edge with the rail cross plate while ensuring both sides are evenly flush with the truck bed. Secure the front rail by fastening the combination screws tightly.

NOTE: To prevent damage caused by handling the hood, this installation procedure can be done with the assistance of two people.


1. Align the cover plate horizontally in the center, and snap the front rail into the slot on the cross plate.

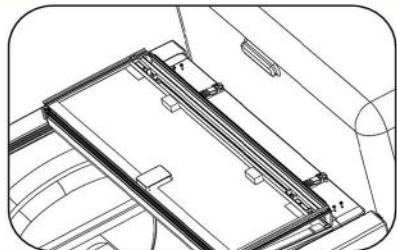


3. Adjust the cover plate left and right to see if the holes are aligned

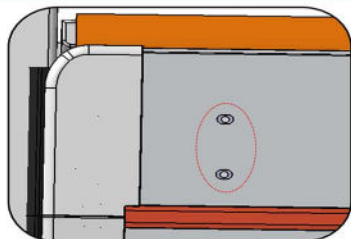


2. Turn out the rubber strip under the front rail and wrap it around the truck bed.

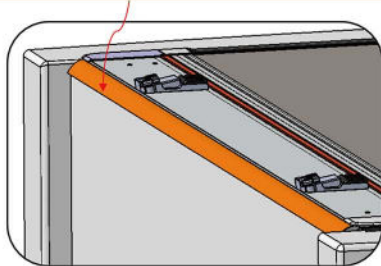


4. Pre-tighten the bolts

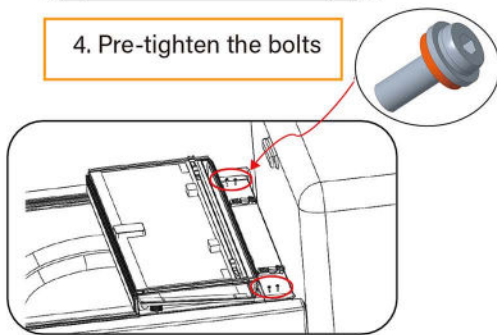


5. Spread the cover horizontally and centered to ensure that each lock is working properly.

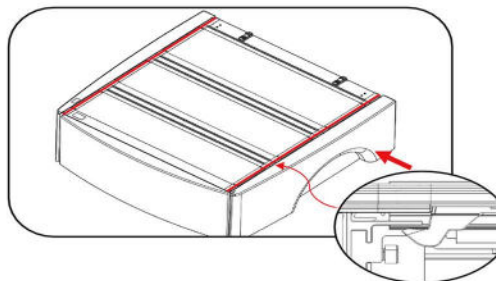


7. Install the included drain hose to the front of the side beam and push the drain hose to the outside of the bottom.

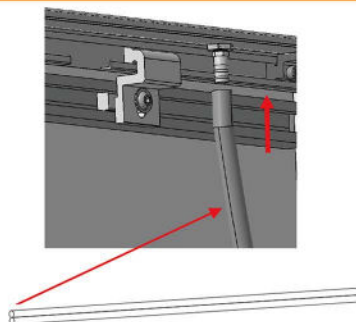


6. Tighten the bolts

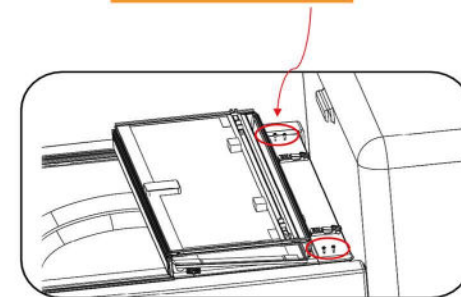

8. Close the cover, then close the tailgate

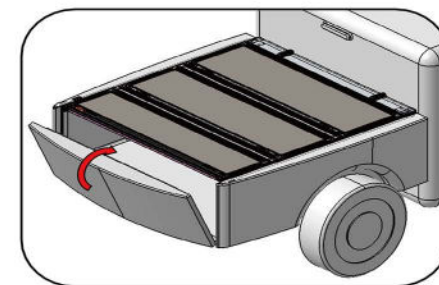

NOTE: Different brands use different shaped clamps.

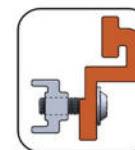

Only the modeling style is different, the install is the same.

